

Data Projector Controls

MUTE

Select **MUTE** to temporarily blank the projected image. Press again to restore the image.

The **MUTE LED** lights when mute function is on. **MUTE** will deplete the life span of the projector lamp.

 
SOUND

Turn the knob to adjust **AUDIO** volume. The LED flashes when minimum or maximum levels have been reached.

POWER

To power the projector ON/OFF press **POWER**. The LED lights when projector is on.

The **POWER LED** flashes during the projector warm up/cool down period, Wait for flashing to stop before pressing the **POWER** again.

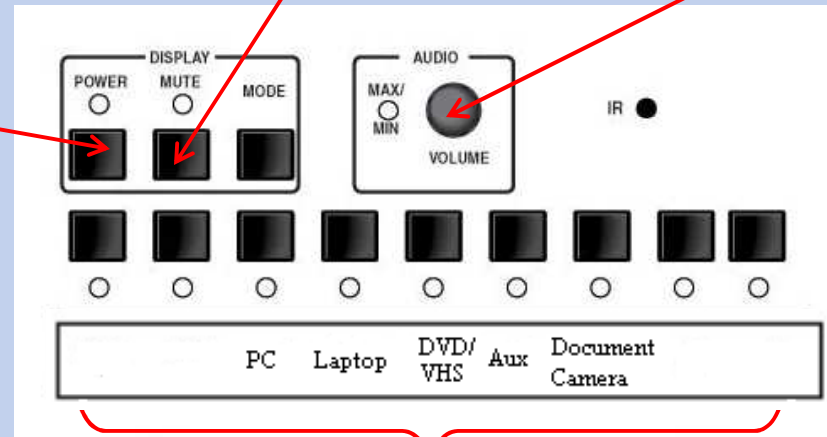

INPUT

Select what **INPUT** to display. LED light signifies what **INPUT** is selected.

 
For assistance please contact
**Technology Support Services at
229-3888.**

VCR/DVD Controls

Select the
DVD or **VCR** function.

Select **MENU** to enter
the DVD's menu.

Select **ENTER** to
commit a selection
on the DVD's menu.

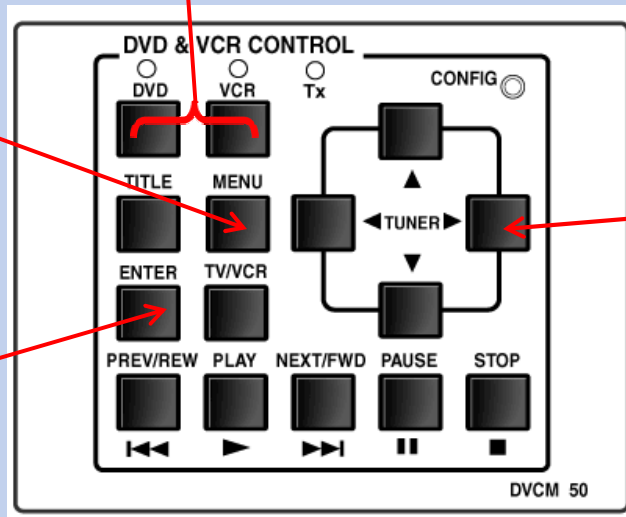

Use directional buttons ▲ ▼
▶ ◀ to navigate through
the DVD's menus.