

## POWER

Press **"PROJ. ON"** to power on projector.  
Press **"PROJ. OFF"** to Power off projector.

## SOURCE SELECT


Select what **SOURCE (1 -8)** to display.  
LED light signifies what **SOURCE** is selected.

## CABLE

In **VCR MODE ONLY** select **"Channel UP"** or **"Channel Down"** to change cable channels.

## DVD MENU NAVIGATION

Use directional buttons **▲ ▼ ▶ ◀** to navigate through the DVD's menus.

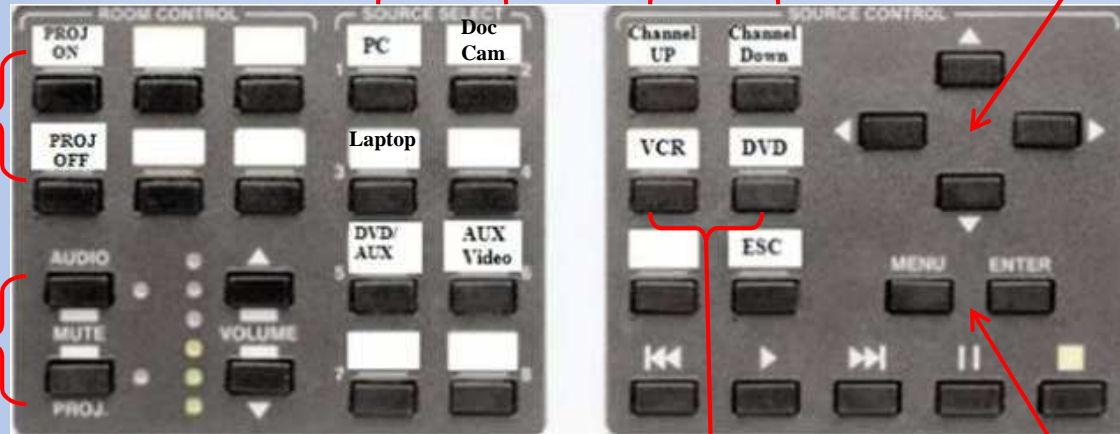

## MUTE

Pressing **"AUDIO MUTE"** turns off the sound until pressed again. Pressing **"PROJ. MUTE"** blanks the display until pressed again.

## SOUND

Press the **▲** to increase volume. Press **▼** to decrease volume. The more lit LEDs the louder the volume.

## DVD/VCR Selection

Select the **DVD** or **VCR** function. The LED light signifies which source will be displayed.

## DVD MENU

Select **MENU** to bring up the DVD main menu. Select **ENTER** to commit a selection on the DVD's menu.